SAMSUNG

SGH S105

SAMSUNG DIGITall
everyone's invited™

Samsung Telecommunications America
1130 East Arapaho Road
Richardson, TX 75081
Telephone: 1-800-SAMSUNG
Tech Support: 1-888-987-HELP (4357)
www.samsungusa.com/wireless

GH68-03088A Rev.1.1

WAP Guide

SAMSUNG DIGITall
everyone's invited™

What is WAP?

WAP (Wireless Application Protocol) is the gateway to a new world of mobile data. It provides a universal standard, enabling you to access web-based interactive information services and applications directly from your mobile phone.

* Some of the contents in this manual may differ from your phone, depending on the software installed or your service provider.

* Licensed under U.S patent no.4,558,302 and foreign counterparts.

Contents

About the WAP Browser 4

Getting Started 5

Accessing the WAP Browser 5

Starting the WAP Browser..... 7

Exiting the WAP Browser 8

Using the WAP Browser 9

Using the Soft Keys..... 9

Navigating the WAP Browser 9

Entering Text, Numbers or Symbols 10

Using the WAP Browser Menus 11

Using and Selecting Menu Options 11

Reload 11

Home..... 11

Go to URL..... 12

Show URL..... 12

About the WAP Browser

Your phone comes equipped with a WAP (Wireless Application Protocol) browser, making it possible for you to access the Wireless Web.

The WAP Browser allows you to:

- Access up-to-the-minute information via your phone
- View specially designed text versions of popular Internet sites including Yahoo!®, CNN Mobile℠ and the Weather Channel®

Browsing the Wireless Web using your phone is unlike using your computer, in that site providers have:

- Selected only the critical aspects of their site for wireless phone users
- Removed most graphics

Each time you start the WAP Browser, the phone connects to the Wireless Web and the service indicator icon (or) appears on the display to inform you that you are:

- Are connected to the Wireless Web
- Will be billed accordingly (rates vary according to your service option)

The WAP Browser ends the network connection after a certain period of inactivity and automatically reconnects as necessary. For this reason, you may find that you are billed for several network connections within a single session. This is normal and is designed to minimize your bill.

Getting Started

Accessing the WAP Browser

To enter the **T-Zones** menu to access the WAP browser:

1. When the idle screen is displayed, press the **Menu** soft key to enter the menu mode.

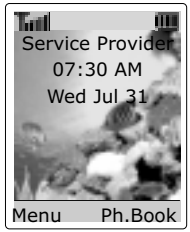

2. Press the — or — key until the **Funbox** menu option is displayed, and then press the **Select** soft key. You can also press the key directly.

3. Press the — or — key one or more times to highlight **T-Zones**, then press the **Select** soft key. You can also press the 2 key directly.

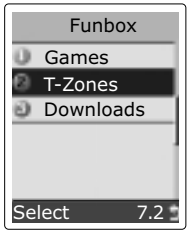

4. Press the — or — key one or more times to highlight the required option and then press the **Select** soft key.

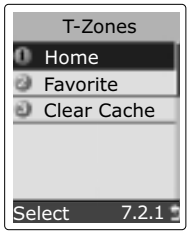

Option	Description
Home	Connects the phone to the network and loads the homepage of the Wireless Web service provider.
Favorite	Allows you to store the URL addresses of your favourite Web sites. You can access this menu directly by pressing and holding down the # key while using the WAP Browser.

Option	Description
Favorite *(continued)*	To store a URL address, select an empty location and enter the address. Three submenus are available. Select **Goto URL** to access the site quickly, **Edit** to edit the selected address and **Erase** to delete the selected address.
Clear Cache	Clears the information stored inthe cache (the phone's temporary memory used to store the most recently accessed Web pages).

Starting the WAP Browser

To start the WAP Browser when the idle screen is displayed, press the key or press the **Menu** soft key, followed by the 7, 2 and 1 keys.

A connection is established with your service provider and the corresponding homepage is displayed.

The content of the WAP Browser startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the — and — keys.

Note: To access the startup homepage from any other screen in the WAP Browser, use the **Home** option. For more information on the WAP Browser menus, refer to page 11.

Exiting the WAP Browser

To exit the browser at any time, simply press the ☎\⏻ key or press and hold down the ⏻ key.

Using the WAP Browser

Using the Soft Keys

A bar containing browser commands is located at the bottom of the WAP Browser display. The soft keys below the bar are used to execute these commands. The two keys are called soft keys because their function changes depending on the WAP Browser application in use.

Navigating the WAP Browser

To...	Then...
Scroll through and select browser items	Press the — or — key until the ▶ symbol points to the required item, and then press the **OK** soft key to confirm the selection.
Select a numbered item	Press the corresponding numeric key.
Return to the previous page	Press the **Back** soft key or the key.
Return to the startup homepage	Select the **Home** menu option; for more information on this option, refer to page 11.

Entering Text, Numbers or Symbols

When you are prompted to enter text, the current text entry mode is indicated on the screen. The following modes are available.

Mode	Description
A / a	Allows you to enter letters in the alphabet. Press the corresponding key until the required letter is displayed.
1	Allows you to enter numbers.

Note: To enter symbols, press the 1 key repeatedly until the required symbol is displayed.

To...	Then...
Change modes	Press the key one or more times.
Enter a space	Press the key.
Edit text	• Set the cursor to the right of the character to be corrected. • Press the key as required. • Enter the correct character(s).

Using the WAP Browser Menus

Using and Selecting Menu Options

Various menu options are available when you are using the WAP Browser to navigate the Wireless Web.

To access a menu option, proceed as follows.

1. Press and hold down the key.
   A menu is displayed.
2. Highlight the required menu option by pressing the — and — keys.
3. Select the option by pressing the **Select** soft key.
4. If necessary, select the secondary option using the — and — keys, and press the **Select** soft key to confirm.

Note: The menus may vary, depending on your version of the WAP Browser.

Reload

This option reloads the current page.

Home

This option takes you back at any time to the homepage of the Wireless Web service provider.

Go to URL

This option allows you to enter manually the URL address of the required Web page.

After entering an address, press the **OK** soft key to go there directly.

Show URL

This feature displays the URL address of the site to which you are currently connected. It also enables you to declare the current site as the startup homepage.

To...	Press the...
Declare the current page as your startup homepage	**Option** soft key, select the **Save to Home** option and press **Select**.
Set a bookmark for the current page	**Option** soft key, select the **Save to Bookmark** option and press **Select**.
Cancel your setting	**Back** soft key.